# NI-9226 Specifications



# **Contents**

NI-9226 Specifications		-
vi-3220 Specifications	•	•

# NI-9226 Specifications

### **Connector Types**

The NI-9226 has more than one connector type: NI-9226 with spring terminal and NI-9226 with DSUB. Unless the connector type is specified, NI-9226 refers to all connector types.

The NI-9226 with spring terminal is available in two types: push-in spring terminal and spring terminal. The push-in type spring terminal connector is black and orange. The spring terminal connector is black. NI-9226 with spring terminal refers to both types unless the two types are specified. Differences between the two types of spring terminal connectors are noted by the connector color.

#### **Related information:**

 Software Support for CompactRIO, CompactDAO, Single-Board RIO, R Series, and **EtherCAT** 

#### **Definitions**

Warranted specifications describe the performance of a model under stated operating conditions and are covered by the model warranty.

**Characteristics** describe values that are relevant to the use of the model under stated operating conditions but are not covered by the model warranty.

- *Typical* specifications describe the performance met by a majority of models.
- **Nominal** specifications describe an attribute that is based on design, conformance testing, or supplemental testing.

Specifications are *Typical* unless otherwise noted.

## **Conditions**

Specifications are valid for the range -40 °C to 70 °C unless otherwise noted.

# **Input Characteristics**

Number of channels		8 analog input channels
ADC resolution		24 bits
Type of ADC		Delta-sigma
Sampling mode		Scanned
Measurement range		
Temperature		-200 °C to 850 °C
Resistance	istance $0~\Omega$ to 4,000 $\Omega$	
Conversion time		
High-resolution mode	200 ms per channel, 1,600 ms total for all channels	
High-speed mode	2.5 ms per channel, 20 ms total for all channels	

**Table 1.** Temperature Accuracy (including noise) $^{[1]1}$ , 4-wire mode

Measured Value	Typical (25 °C)	Maximum (-40 °C to 70 °C)
-200 °C to 150 °C	±0.15 °C	±0.5 °C

<sup>1.</sup> For high-speed mode, add 0.1  $^{\circ}\text{C}$  of error.

Measured Value	Typical (25 °C)	Maximum (-40 °C to 70 °C)	
150 °C to 850 °C	±0.20 °C	±1.1 °C	

#### **Table 2.** Temperature Accuracy (including noise) $^{[1]}$ , 3-wire mode<sup>2</sup>

Measured Value	Typical (25 °C)	Maximum (-40 °C to 70 °C)
-200 °C to 150 °C	±0.20 °C	±0.5 °C
150 °C to 850 °C	±0.30 °C	±1.1 °C

#### **Table 3.** Resistance measurement accuracy (including noise) $[3]^3$ , 4-wire mode

Measurement Conditions	Offset Error	Gain Error
Typical (25 °C)	±0.06 Ω	±0.007%
Maximum (-40 °C to 70 °C)	±0.83 Ω	±0.058%

#### **Table 4.** Resistance measurement accuracy (including noise)<sup>[3]</sup>, 3-wire mode

Measurement Conditions	Offset Error	Gain Error
Typical (25 °C)	±0.11 Ω	±0.007%
Maximum (-40 °C to 70 °C)	±1.0 Ω	±0.058%

#### **Table 5.** Stability


Mode	Offset Drift	Gain Drift
4-wire	±31 mΩ/°C	±10 ppm/°C
3-wire	±33 mΩ/°C	±10 ppm/°C

Noise		
High-resolution mode	$0.001~^{\circ}\text{C RMS}$ (3 m $\Omega$ RMS)	

- 2. The 3-wire specification assumes equal wire length connecting RTD+ terminal to RTD sensor and COM terminal to RTD sensor. If the lengths are unequal or there is a mismatch between the path resistances, use the following formula to evaluate additional error: °C error =  $R_{mismatch}$  \* 0.342 °C/ $\Omega$
- 3. For high-speed mode, add 0.27  $\Omega$  of error.

High-speed mode $0.02~^{\circ}\text{C RMS}$ (60 m $\Omega$ RMS)				
Excitation current		0.1 mA per channel		
Noise rejection				
Normal mode (50/60 Hz)				
High-resolution mode				85 dB
High-speed mode				None
Common-mode rejection, channel-	-to-earth g	round (50/60 Hz)		
High-resolution mode	>170 dB			
High-speed mode	119 dB (spring-terminal); 112 dB (DSUB)			
Input bandwidth (high-resolution mode)		3.3 Hz		

**Figure 1.** High-Resolution Filter Response<sup>4</sup>, <sup>5</sup>

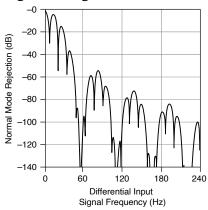

- 4. This image is provided courtesy of Linear Technology Corp.
- 5. High-speed filter response has the same characteristics as the high-resolution filter response except that the first notch is at 14 kHz.

Overvoltage protection	±30 V, maximum
------------------------	----------------

# NI-9226 with Spring Terminal (Black Connector) Safety **Voltages**

Connect only voltages that are within the following limits.

Channel-to-channel		None
Channel-to-earth g	ground	,
Continuous	250 V RMS, Measurement Category II	
Withstand	3,000 V RMS, verified by a 5 sdielectric withstand test	

# NI-9226 with Push-In Style Spring Terminal (Black/Orange **Connector) Safety Voltages**

Connect only voltages that are within the following limits.

Channel-to-channel		None
Channel-to-earth ground		
Continuous	250 V RMS, Measurement Category II	
Withstand up to 5,000 m	3,000 V RMS, verified by a 5 sdielectric with	stand test

## NI-9226 with DSUB Safety Voltages

Connect only voltages that are within the following limits.

Channel-to-channel		None
Channel-to-earth ground		
Continuous	60 V DC, Measurement Category I	
Withstand up to 3,000 m	1,000 V RMS, verified by a 5 sdielectric with	stand test
Withstand up to 5,000 m	860 V RMS, verified by a 5 sdielectric withst	and test

## **Measurement Category**

## **Measurement Category I**



**Caution** Do not connect the NI-9226 with DSUB to signals or use for measurements within Measurement Categories II, III, or IV.



**Attention** Ne pas connecter le NI-9226 with DSUB à des signaux dans les catégories de mesure II, III ou IV et ne pas l'utiliser pour effectuer des mesures dans ces catégories.



**Warning** Do not connect the NI-9226 with DSUB to signals or use for measurements within Measurement Categories II, III, or IV, or for measurements on MAINs circuits or on circuits derived from Overvoltage Category II, III, or IV which may have transient overvoltages above what the product can withstand. The product must not be connected to circuits that have a maximum voltage above the continuous working voltage, relative to

earth or to other channels, or this could damage and defeat the insulation. The product can only withstand transients up to the transient overvoltage rating without breakdown or damage to the insulation. An analysis of the working voltages, loop impedances, temporary overvoltages, and transient overvoltages in the system must be conducted prior to making measurements.



Mise en garde Ne pas connecter le NI-9226 with DSUB à des signaux dans les catégories de mesure II, III ou IV et ne pas l'utiliser pour des mesures dans ces catégories, ou des mesures sur secteur ou sur des circuits dérivés de surtensions de catégorie II, III ou IV pouvant présenter des surtensions transitoires supérieures à ce que le produit peut supporter. Le produit ne doit pas être raccordé à des circuits ayant une tension maximale supérieure à la tension de fonctionnement continu, par rapport à la terre ou à d'autres voies, sous peine d'endommager et de compromettre l'isolation. Le produit peut tomber en panne et son isolation risque d'être endommagée si les tensions transitoires dépassent la surtension transitoire nominale. Une analyse des tensions de fonctionnement, des impédances de boucle, des surtensions temporaires et des surtensions transitoires dans le système doit être effectuée avant de procéder à des mesures.

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as **MAINS** voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.



Note Measurement Categories CAT I and CAT O are equivalent. These test and measurement circuits are for other circuits not intended for direct connection to the MAINS building installations of Measurement Categories CAT II, CAT III, or CAT IV.

#### **Measurement Category II**



**Caution** Do not connect the NI-9226 with spring terminal to signals or use for measurements within Measurement Categories III or IV.



**Attention** Ne pas connecter le NI-9226 avec bornier à ressort à des signaux dans les catégories de mesure III ou IV et ne pas l'utiliser pour effectuer des mesures dans ces catégories.

Measurement Category II is for measurements performed on circuits directly connected to the electrical distribution system. This category refers to local-level electrical distribution, such as that provided by a standard wall outlet, for example, 115 V for U.S. or 230 V for Europe.

#### **Environmental Characteristics**

Temperature			
Operating		-40 °C to 70 °C	
Storage		-40 °C to 85 °C	
Humidity		'	
Operating 10% RH to 90% RH, noncondensing		I, noncondensing	
Storage 5% RH to 95% RH, noncondensing			
Ingress protection		IP40	
Pollution Degree			2

Maximum altitude		5,000 m	
Shock and Vibration	n		
Operating vibration	1		
Random	5 g RMS, 10 Hz to 500 Hz		
Sinusoidal 5 g, 10 Hz to 500 Hz			
Operating shock	ing shock 30 g, 11 ms half sine; 50 g, 3 ms half sine; 18 shocks at 6 orientations		

To meet these shock and vibration specifications, you must panel mount the system.

# **Power Requirements**

Power consumption from chassis, maximum		
Active mode	463 mW	
Sleep mode	90	μW
Thermal dissipation, maximum		
Active mode		1.2 W
Sleep mode		0.76 W

# **Physical Characteristics**

Weight
--------

NI-9226 with spring terminal (black connector)		156 g (5.5 oz)
NI-9226 with spring terminal (black/orange connector)		161 g (5.7 oz)
NI-9226 with DSUB		143 g (5.04 oz)
Dimensions Visit <u>ni.com/dimensions</u> and search by module number.		

## NI-9226 with Spring Terminal (Black Connector)

The NI-9226 (black connector) requires a flathead screwdriver with a 2.3 mm  $\times$  1.0 mm (0.09 in.  $\times$  0.04 in.) blade for signal connection; insert the screwdriver into a spring clamp activation slot to open the corresponding connector terminal, press a wire into the open connector terminal, and then remove the screwdriver from the activation slot to clamp the wire into place.

Spring terminal wiring		
Gauge	0.08 mm <sup>2</sup> to 1.0 mm <sup>2</sup> (28 AWG to 18 AWG) copper conductor wire	
Wire strip length	7 mm (0.28 in.) of insulation stripped from the end	
Temperature rating	90 °C minimum	
Wires per spring terminal	One wire per spring terminal	
Connector securement		

Securement type	Screw flanges provided
Torque for screw flanges	0.2 N·m (1.80 lb·in.)

## NI-9226 with Push-In Style Spring Terminal (Black/Orange **Connector**)

The push-in spring style NI-9226 does not require a tool for signal connection; push the wire into the terminal when using solid wire or stranded wire with a ferrule, or by pressing the push button when using stranded wire without a ferrule.

Spring terminal wiring			
Gauge	0.14 mm <sup>2</sup> to 1.5 mm <sup>2</sup> (26 AWG to 16 AWG) copper conductor wire		
Wire strip length	10 mm (0.394 in.) of insulation stripped from the end		
Temperature rating	90 °C minimum		
Wires per spring terminal	One wire per spring terminal; two wires per spring terminal using a 2-wire ferrule		
Ferrules	0.14 mm <sup>2</sup> to 1.5 mm <sup>2</sup>		
Connector securement			
Securement type	Screw flanges provided		

Torque for screw flanges	0.2 N · m (1.80 lb · in.)

## **Power Requirements**

Power consumption from chassis, maximum		
Active mode	463 mW	
Sleep mode	90 µ	WL
Thermal dissipation, maximum		
Active mode		1.2 W
Sleep mode		0.76 W

## **Calibration**

You can obtain the calibration certificate and information about calibration services for the NI-9226 at <u>ni.com/calibration</u>.

Calibration interval	1 year
----------------------	--------