

Anritsu envision : ensure

Site Master™

Ultraportable Cable & Antenna Analyzer
Featuring Classic and Advanced Modes

S331P

150 kHz to 4.0 GHz or 6 GHz



Introduction

Anritsu introduces its ninth generation, compact handheld Cable & Antenna Analyzer for installation and maintenance of antenna systems. It is available in two frequency ranges starting from 150 kHz and up to 4 GHz or 6 GHz.

Optimized for Field Use

- FlexCal™ Calibration
 - One Calibration for All Frequencies
- Impact, Dust, and Splash Resistant
- Smallest, Lightest, and Fastest Site Master™

Easy to Use

- Factory default calibration (1-Port ReadyCal) automatically applied to OSL measurements
- S331D-like Classic Mode
- S331E-like Advanced Mode
 - Additional Markers
 - Customizable Shortcuts
 - Full-screen View
- S331L-like Graphical User Interface and Functionality
- Integrated Help Function
- EZ Name Quick Matrix
- easyTest™
- Controlled and Powered by a Windows tablet or PC using standard USB 2.0 (not included)

Efficient Sweep Management

- Internal File Storage (limited only by space on PC or Tablet)
 - Sweeps, Setups, Screen Shots
- Line Sweep Tools (LST) Software
 - Edit Sweeps, Rename, Archive
 - Generate PDF or HTML Reports
- Fast Preview of Stored Sweeps
- Standard *.dat and *.csv File Formats
- Compatible with HHST
 - Widely Accepted by Operators



Site Master™ S331P Cable & Antenna Analyzer Featuring USB Connectivity with a Windows PC or Tablet
 Size: 52 mm x 148 mm x 36 mm (2 in x 5.8 in x 1.4 in), Lightweight: < 0.4 kg (< 0.9 lb)

Table of Contents

Definitions.....3
 Cable and Antenna Analyzer4
 General Specifications6
 Recommended External PC Configuration6
 Anritsu Tool Box and Line Sweep Tools7
 easyTest Tools (for your PC).....7
 Ordering Information8
 Calibration and Extended Warranty Options8
 Standard Accessories8
 Reference Documents.....8
 Optional Accessories.....9

Definitions

All specifications and characteristics apply to Revision 2 instruments under the following conditions, unless otherwise stated:

Warm-Up Time	After 10 minutes of warm-up time, where the instrument has completely stabilized to the ambient temperature.
Temperature Range	23 °C ± 5 °C
Frequency Reference	Internal frequency reference is used.
Calibration	Instrument is within the recommended calibration cycle of 12 months. Cable and Antenna Analyzer measurements applicable after standard OSL calibration is performed using Anritsu calibration components.
Typical Performance	Typical specifications in parentheses () describe performance that will be met by a minimum of 80% of all products. They do not include guard bands and are not warranted. Typical specifications that are not in parentheses are not tested and not warranted. They are generally representative of the nominal characteristic performance.
Uncertainty	A coverage factor of k = 2 is applied to the measurement uncertainties to facilitate comparison with other industry monitors. All specifications subject to change without notice. For the most current data sheet, please visit the Anritsu web site: www.anritsu.com

 **Cable and Antenna Analyzer**

Measurements

Measurements	VSWR Return Loss Cable Loss (One Port) Distance-to-Fault (DTF) Return Loss Distance-to-Fault (DTF) VSWR Smith Chart 50 Ω/75 Ω (Advanced Mode Only) 1-Port Phase (Advanced Mode Only) Transmission with External Sensor (Advanced Mode Only)
--------------	--

Setup Parameters–Classic Mode

Measurement Display	Single Display with independent markers
Frequency	Start Frequency (F1), Stop Frequency (F2)
DTF	Start Distance (D1), Stop Distance (D2), DTF Aid, Cable Loss, Propagation Velocity, Cable type
Windowing	Rectangular, Normal Side Lobe, Low Side Lobe, Minimum Side Lobe
Amplitude	Top, Bottom Auto Scale, Full Scale
Sweep	Data Points, Run/Hold, Single/Continuous, Trace
Data Points	130, 259, 517, 1033, 2065
Markers	Markers 1 to 6 (On/Off), Delta Markers 2 to 4 (Ref M1), Marker to Peak/Valley, Marker Table, Marker 5 (Peak/Valley between M1 & M2), Marker 6 (Peak/Valley between M3 & M4), Independent Markers for Frequency and Distance Measurements
Traces	Copy Trace To Memory, Trace Display, Trace Math [Trace - Memory, Trace + Memory, (Trace + Memory)/2]
Limit Line	On/Off, Edit Value, Limit Alarm, Pass/Fail On/Off, Limit Preset
Calibration	Factory default 1-Port ReadyCal (automatically applied to all measurements) User calibration (User Cal) overrides ReadyCal Start Calibration, Cal Info, User Cal (On/Off), Cal Method: OSL Cal Types: Standard, FlexCal™
Save/Recall	Setups, Measurements, Screen Shots

Setup Parameters–Advanced Mode

Measurement Display	Single/Dual Display with independent markers
Frequency	Start Frequency (F1), Stop Frequency (F2)
DTF	Start Distance (D1), Stop Distance (D2), Units m/ft, DTF Aid, Cable List, Cable Loss, Propagation Velocity
Windowing	Rectangular, Normal Side Lobe, Low Side Lobe, Minimum Side Lobe
Amplitude	Top, Bottom, Auto Scale, Full Scale
Sweep	Data Points, Run/Hold, Single/Continuous, RF Immunity (High/Low)
Data Points	130, 259, 517, 1033, 2065
Markers	Markers 1 to 8 (On/Off), Delta Markers 2 to 8 (Ref M1), Marker Tracking (On/Off), Marker to Peak/Valley, Marker Table, Marker 5 & 7 (Peak/Valley between M1 & M2), Marker 6 & 8 (Peak/Valley between M3 & M4), Independent Markers for Frequency and Distance Measurements
Traces	Copy Trace to Memory, Trace Display, Trace Math [Trace - Memory, Trace + Memory, (Trace + Memory)/2]
Limit Line	Active Limit (Upper/Lower), Limit State (On/Off), Move Active Limit, Edit Segments (42 upper and 42 lower segments maximum), Limit Alarm, Pass/Fail On/Off, Limit Preset
Calibration	Factory default 1-Port ReadyCal (automatically applied to all measurements except Transmission) User calibration (User Cal) overrides ReadyCal Start Calibration, Cal Info, User Cal (On/Off), Cal Methods: OSL, Transmission, OSL + Transmission Cal Types: Standard, FlexCal™
Save/Recall	Setups, Measurements, Screen Shots

Frequency

Frequency Ranges	500 kHz to 4 GHz (S331P-0704) 500 kHz to 6 GHz (S331P-0706) Either option can be set as low as 150 kHz
Frequency Accuracy	± 2.5 ppm @ 23 °C ± 3 °C
Frequency Resolution	1 kHz

Power

Output Power	-5 dBm, typical
--------------	-----------------

Interference Immunity

On Channel and On Frequency +17 dBm, typical

Measurement Speed

500 µs/data point (timing dependent on external computer configuration)

 **Cable and Antenna Analyzer** (continued)

Return Loss

Measurement Range 0 to 60 dB
Resolution 0.01 dB

VSWR

Measurement Range 1 to 65
Resolution 0.01

Cable Loss

Measurement Range 0 to 30 dB
Resolution 0.01 dB

Distance-to-Fault

Vertical Range Return Loss 0 to 60 dB
Vertical Range VSWR 1 to 65
Fault Resolution (meters) $(1.5 \times 10^8 \times vp) / \Delta F$ (vp = propagation velocity, ΔF is F2 - F1 in Hz)
Horizontal Range (meters) 0 to (Data Points - 1) x Fault Resolution, to maximum of 1500 meters (4921 ft)

1-Port Phase (Advanced Mode Only)

Measurement Display Range -450 ° to +450 °
Resolution 0.01 °

Smith Chart (Advanced Mode Only)

Impedance 50 Ω, 75 Ω
Resolution 0.01



Transmission Ext Sensor (Advanced Mode Only)

Measurement Display Range -100 dB to +100 dB
Resolution 0.01 dB

Measurement Accuracy (at 23 °C ± 3 °C)

Corrected Directivity ≥ 42 dB, OSL calibration (OSLN50A-8, OSLN50A-8)

Return Loss Measurement Uncertainty (Standard OSL calibration. OSLN50A-8 Precision Open/Short/Load calibration component.)

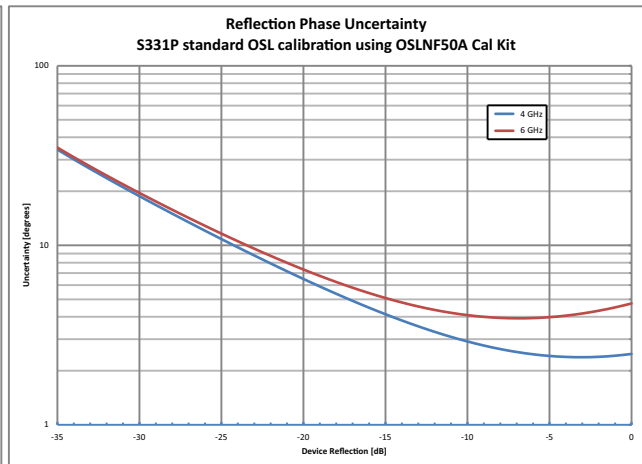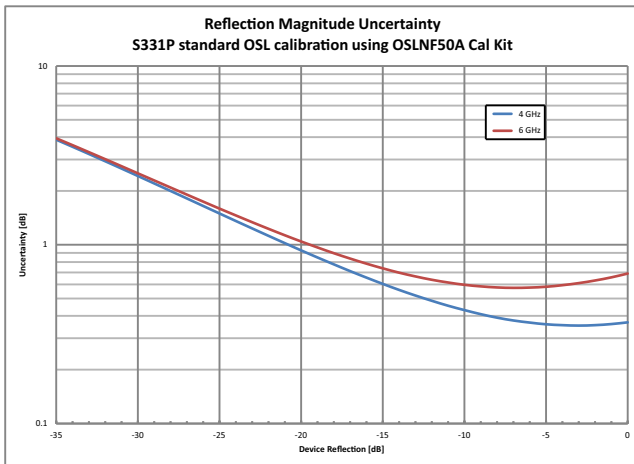

General Specifications

Setup Parameters

System Info	Status
System Setups	Language, Display/Audio
Language	English, French, German, Italian, Spanish, Russian, Portuguese, Japanese, Korean, Chinese
Display/Audio	Brightness, Color Schemes, Screen Shot Settings, Volume
Connectivity	USB
Diagnostics	Self Test
Preset	Preset, Reset
Reset	Factory Reset, Delete All User Files, Delete Custom Files, Master Reset
File	Save, Recall, File Management
Save	Measurement (*.dat, *.csv), Setup (*.stp), Screen Shot (*.png), System and Self Test Info (*.txt)
Recall	Recall, Create Folder, Copy, Paste, Delete
File Management	Rename, Create Folder, Copy, Paste, Delete
Navigation	Top, Bottom, Page Up, Page Down
Help Menu	System Info, FAQ, User Guide
Internal Trace/Setup Memory	> 1000 files for traces, setups, screen shots, or any combination (limited by PC/Tablet storage)
External Trace/Setup Memory	Limited only by size of USB Flash drive

Connectors

RF Port	Type N(m), 50 Ω, Maximum input +23 dBm maximum, ±50 VDC maximum
USB Port	USB 2.0 port for connecting to an external PC controller

Regulatory Compliance

European Union	EMC 2014/30/EU, EN 61326:2013, CISPR 11/EN 55011, IEC/EN 61000-4-2/3/4/5/6/8/11 Low Voltage Directive 2014/35/EU Safety EN 61010-1:2010 RoHS Directive 2011/65/EU applies to instruments with CE marking placed on the market after July 22, 2017
Australia and New Zealand	RCM AS/NZS 4417:2012
South Korea	KCC-REM-A21-0004

Environmental

	MIL-PRF-28800F Class 2
Operating Temperature Range	-10 °C to 55 °C
Storage Temperature Range	-51 °C to 71 °C
Maximum Relative Humidity	95 % RH at 30 °C, non-condensing
Vibration, Sinusoidal	5 Hz to 55 Hz
Vibration, Random	10 Hz to 500 Hz
Half Sine Shock	30 g _n
Altitude	4600 meters, operating and non-operating

Size and Weight

Size	52 mm x 148 mm x 36 mm (2 in x 5.8 in x 1.4 in)
Weight	< 0.4 kg (< 0.9 lb), typical

Recommended External PC Configuration

One USB 2.0 (or higher) port
S331P software is compatible with Windows® 7, 8, 8.1, or 10; 32 or 64 bit operating systems.
Tested with tablets running Windows 10 and Intel Atom X5-Z8300 processor.

 **Anritsu Tool Box and Line Sweep Tools** (for your PC)

Line Sweep Tools (LST) is a free PC based program that increases productivity for people who deal with numerous Cable and Antenna traces every day. LST is the next generation of Anritsu's familiar Handheld Software Tools (HHST) and shares its uncomplicated user interface, giving a new face to the term "ease of use."

Cable Editor ¹	Instrument Cable Lists may be retrieved from the instrument, modified as required, and uploaded back into instrument.
Distance to Fault ² (DTF)	Easily convert Return Loss or VSWR traces to Distance to Fault traces with one button press.
Measurement Calculator	Provides quick conversion between commonly used measurement units such as VSWR, RL, and others.
Signal Standard Editor ¹	Signal Standard Lists may be retrieved from the instrument, modified as required, and uploaded back into instrument.
Naming Grid	A naming grid function makes changing file names, trace titles, and trace subtitles from field values to those required by contract simple and quick. Once the naming grid is populated with user defined file name segments, a few simple button presses will then fill out the file, title, and sub-title names. Quickly applied to multiple traces, the naming grid can save time, increase efficiency and accuracy.
Presets	Presets make applying markers and a limit line to similar traces quick and easy. They only need to be set once, and recorded. After this, applying them to a similar trace requires only one button push. This speeds up trace processing and makes providing consistent marker and limit line settings easy.
Report Generator	The report generator creates a professional PDF or HTML based report. Reports may include GPS ³ location, power level ³ , company logo ⁴ , instrument and calibration status along with a display of all open traces. It also may contain additional information such as addresses and phone numbers.
Connection	File transfer.
Supported File Types	Input: *.dat, *.vna, *.mna, *.pim, *.tm Output: *.dat, *.vna, *.pim, *.tm, *.csv, *.bmp, *.jpg, *.png

 **easyTest Tools** (for your PC)

Instrument Mode	
	Cable & Antenna Analyzer Mode
Commands	
Display Image	Allows a custom on-screen image
Recall Setup	Places the instrument into a known state
Prompt	Displays instructional messages for the user
Save	Allows automatic or manual saving of traces

1. Instrument type/model must match original
 2. Only *.dat and *.vna file types supported
 3. Model dependent
 4. Optionally set by user

Ordering Information



Model Number	Description
S331P	Cable and Antenna Analyzer (required one frequency option)
Frequency Options	
S331P-0704	150 kHz to 4 GHz
S331P-0706	150 kHz to 6 GHz

Calibration and Extended Warranty Options

Option	Description
S331P-ES510	Warranty Extension to 5 Years
S331P-ES513	Warranty Extension to 5 Years with Z540 Calibration
S331P-0098	Standard Calibration to ISO17025 and ANSI/NCCL Z540-1. Includes calibration certificate.
S331P-0099	Premium Calibration to ISO17025 and ANSI/NCCL Z540-1. Includes calibration certificate, test report, and uncertainty data.

Standard Accessories (included with instrument)



Part Number	Description
2000-1864-R	Soft Carrying Case
2000-1816-R	USB-A to Micro-USB, 1.83 m (6 ft)
2000-1687-R	Torque Multiplier N(m)
	Standard Three-Year Warranty
	Certificate of Calibration and Conformance

Reference Documents (Soft copies available at www.anritsu.com)

Part Number	Description
11410-00964	Site Master™ S331P Technical Data Sheet
10580-00426	Site Master™ S331P User Guide
11410-00674	Cable and Antenna Analysis Troubleshooting Guide

Optional Accessories

Calibration Components, 50 Ω



Part Number	Description
OSLN50A-8	Precision Open/Short/Load, N(m), 42 dB, DC to 8.0 GHz, 50 Ω
OSLNF50A-8	Precision Open/Short/Load, N(f), 42 dB, DC to 8.0 GHz, 50 Ω
2000-1618-R	Precision Open/Short/Load, 7/16 DIN(m), DC to 6.0 GHz 50 Ω
2000-1619-R	Precision Open/Short/Load, 7/16 DIN(f), DC to 6.0 GHz 50 Ω
2000-1914-R	Precision Open/Short/Load, 4.3-10(f), DC to 6 GHz, 50 Ω
2000-1915-R	Precision Open/Short/Load, 4.3-10(m), DC to 6 GHz, 50 Ω
22N50	Open/Short, N(m), DC to 18 GHz, 50 Ω
22NF50	Open/Short, N(f), DC to 18 GHz, 50 Ω
SM/PL-1	Precision Load, N(m), 42 dB, DC to 6.0 GHz
SM/PLNF-1	Precision Load, N(f), 42 dB, DC to 6.0 GHz

Calibration Components, 75 Ω



Part Number	Description
12N50-75B	Matching Pad, DC to 3 GHz, 50 Ω to 75 Ω
22N75	Open/Short, N(m), DC to 3 GHz, 75 Ω
22NF75	Open/Short, N(f), DC to 3 GHz, 75 Ω
26N75A	Precision Termination, N(m), DC to 3 GHz, 75 Ω
26NF75A	Precision Termination, N(f), DC to 3 GHz, 75 Ω

Adapters



Part Number	Description
510-91-R	7/16 DIN(f) to N(f), DC to 7.5 GHz, 50 Ω
510-96-R	7/16 DIN(m) to 7/16 DIN(m), DC to 7.5 GHz, 50 Ω
510-97-R	7/16 DIN(f) to 7/16 DIN(f), DC to 7.5 GHz, 50 Ω
1091-80-R	SMA(m) to N(f), DC to 18 GHz, 50 Ω
1091-81-R	SMA(f) to N(f), DC to 18 GHz, 50 Ω
1091-433-R	Low PIM Adapter, 4.1-9.5(f) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
1091-434-R	Low PIM Adapter, 4.1-9.5(m) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
1091-435-R	Low PIM Adapter, 4.1-9.5(f) to N(m), DC to 3.0 GHz, 50 Ω
1091-436-R	Low PIM Adapter, 4.1-9.5(m) to N(m), DC to 3.0 GHz, 50 Ω
1091-440-R	Low PIM Adapter, 4.3-10(f) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
1091-441-R	Low PIM Adapter, 4.3-10(m) to 7/16 DIN(f), DC to 3.0 GHz, 50 Ω
1091-442-R	Low PIM Adapter, 4.3-10(f) to N(m), DC to 3.0 GHz, 50 Ω
1091-443-R	Low PIM Adapter, 4.3-10(m) to N(m), DC to 3.0 GHz, 50 Ω
1091-465-R	Adapter, DC to 6 GHz, 4.3-10(f) to N(f), 50 Ω
1091-467-R	Adapter, DC to 6 GHz, 4.3-10(m) to N(f), 50 Ω

Precision Adapters



Part Number	Description
34NN50A	Precision Adapter, N(m) to N(m), DC to 18 GHz, 50 Ω
34NFN50	Precision Adapter, N(f) to N(f), DC to 18 GHz, 50 Ω

Attenuators



Part Number	Description
3-1010-122	20 dB, 5 W, DC to 12.4 GHz, N(m) to N(f)
42N50-20	20 dB, 5 W, DC to 18 GHz, N(m) to N(f)
42N50A-30	30 dB, 50 W, DC to 18 GHz, N(m) to N(f)
3-1010-123	30 dB, 50 W, DC to 8.5 GHz, N(m) to N(f)
1010-127-R	30 dB, 150 W, DC to 3 GHz, N(m) to N(f)
3-1010-124	40 dB, 100 W, DC to 8.5 GHz, N(f) to N(m), Unidirectional
1010-121	40 dB, 100 W, DC to 18 GHz, N(f) to N(m), Unidirectional
1010-128-R	40 dB, 150 W, DC to 3 GHz, N(m) to N(f)

Optional Accessories (continued)

USB Power Sensors and Transmission Sensors (for complete ordering information, see the respective data sheets of each sensor)



Part Number	Description
MA24105A	Inline Peak Power Sensor, 350 MHz to 4 GHz, +3 dBm to +51.76 dBm
MA24106A	RF USB Power Sensor and 2-Port Loss/Transmission Sensor, 50 MHz to 6 GHz, +23 dBm to -40 dBm
MA24108A	Microwave USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 8 GHz, +20 dBm to -40 dBm
MA24118A	Microwave USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 18 GHz, +20 dBm to -40 dBm
MA24126A	Microwave USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 26 GHz, +20 dBm to -40 dBm
MA24208A	Microwave Universal USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 8 GHz, +20 dBm to -60 dBm
MA24218A	Microwave Universal USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 18 GHz, +20 dBm to -60 dBm
MA24330A	Microwave CW USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 33 GHz, +20 dBm to -70 dBm
MA24340A	Microwave CW USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 40 GHz, +20 dBm to -70 dBm
MA24350A	Microwave CW USB Power Sensor and 2-Port Loss/Transmission Sensor, 10 MHz to 50 GHz, +20 dBm to -70 dBm
SC8268	USB Transmission Sensor, K(m), 1 MHz to 40 GHz, +10 dBm to -50 dBm
MA25100A	RF Power Indicator

USB Extender Kit (for use with external 2-port cable loss/transmission sensors; requires Cat 5e extension cable, sold separately)



Model Number	Description
2000-1717-R ^a	USB 1.1 Passive 40 m Extender
2000-1900-R	USB 2.0 Active 100 meter Extender (with Type A power cord for USA, Japan, North America, Central America and Caribbean)
2000-1901-R	USB 2.0 Active 100 meter Extender (with Type C power cord for use in Europe, India, South Korea, and many countries in Middle East and Africa)
2000-1902-R	USB 2.0 Active 100 meter Extender (with Type I power cord for use in Australia, New Zealand, Argentina, and the South Pacific)
2000-1903-R	USB 2.0 Active 100 meter Extender (with Type G power cord for use in the UK, and several other countries in Asia, the Middle East, and Africa)
2100-28-R	Cat 5e extension cable for use with USB Extender (22.5 m)

a. Not compatible with MA24208A, MA24218A, MA24330A, MA24340A, and MA24350A sensors; must use active extenders with these sensors.

Backpack and Transit Case



Part Number	Description
67135	Anritsu Backpack (for instrument and PC)
760-283	Transit Case, USB 1 Port VNA

Notes

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: www.anritsu.com/training



• United States

Anritsu Americas Sales Company
450 Century Parkway, Suite 190
Allen, TX 75013, U.S.A.
Phone: +1-800-Anritsu (1-800-267-4878)

• Canada

Anritsu Electronics Ltd.
700 Silver Seven Road, Suite 120
Kanata, Ontario K2V 1C3, Canada
Phone: +1-613-591-2003
Fax: +1-613-591-1006

• Brazil

Anritsu Eletronica Ltda.
Praça Amadeu Amaral, 27 - 1 Andar
01327-010 - Bela Vista - Sao Paulo - SP
Brazil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.
Blvd Miguel de Cervantes Saavedra #169 Piso 1,
Col. Granada
Mexico, Ciudad de Mexico, 11520, MEXICO
Phone: +52-55-4169-7104

• United Kingdom

Anritsu EMEA L td.
200 Capability Green
Luton, Bedfordshire, LU1 3LU, U.K.
Phone: +44-1582-433200
Fax: +44-1582-731303

• France

Anritsu S.A.
12 avenue du Québec, Bâtiment Iris 1- Silic 612,
91140 Villebon-sur-Yvette, France
Phone: +33-1-60-92-15-50
Fax: +33-1-64-46-10-65

• Germany

Anritsu GmbH
Nemetschek Haus, Konrad-Zuse-Platz 1
81829 München, Germany
Phone: +49-89-442308-0
Fax: +49-89-442308-55

• Italy

Anritsu S.r.l.
Via Elio Vittorini 129, 00144 Roma, Italy
Phone: +39-6-509-9711
Fax: +39-6-502-2425

List Revision Date: 20181114

• Sweden

Anritsu AB
Isafjordsgatan 32C
164 40 Kista, Sweden
Phone: +46-8-534-707-00

• Finland

Anritsu AB
Teknobulevardi 3-5
FI-01530 Vantaa, Finland
Phone: +358-20-741-8100
Fax: +358-20-741-8111

• Denmark

Anritsu A/S
Torveporten 2
2500 Valby, Denmark
Phone: +45-7211-2200
Fax: +45-7211-2210

• Russia

Anritsu EMEA Ltd.
Representation Office in Russia
Tverskaya str. 16/2, bld. 1, 7th floor
Moscow 125009, Russia
Phone: +7-495-363-1694
Fax: +7-495-935-8962

• Spain

Anritsu EMEA Ltd.
Representation Office in Spain
Paseo de la Castellana, 141. Planta 5
Edificio Cuzco IV
28046 Madrid, Spain
Phone: +34-915-726-761
Fax: +34-915-726-621

• United Arab Emirates

Anritsu EMEA Ltd.
Dubai Liaison Office
902 Aurora Tower
P O Box: 500311 - Dubai Internet City
Dubai, United Arab Emirates
Phone: +971-4-3758479
Fax: +971-4-4249036

• India

Anritsu India Private Limited
6th Floor, Indiqube ETA, No.38/4
Adjacent to EMC2, Doddanekundi, Outer Ring Road
Bengaluru 560048, India
Phone: +91-80-6728-1300
Fax: +91-80-6728-1301

• Singapore

Anritsu Pte. Ltd.
11 Chang Charn Road, #04-01, Shriro House
Singapore 159640
Phone: +65-6282-2400
Fax: +65-6282-2533

• P.R. China (Shanghai)

Anritsu (China) Co., Ltd.
Room 2701-2705, Tower A
New Caohejing International Business Center
No. 391 Gui Ping Road
Shanghai 200233, P.R. China
Phone: +86-21-6237-0898
Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

Anritsu Company Ltd.
Unit 1006-7, 10/F.
Greenfield Tower, Concordia Plaza
No. 1 Science Museum Road
Tsim Sha Tsui East, Kowloon
Hong Kong, P.R. China
Phone: +852-2301-4980
Fax: +852-2301-3545

• Japan

Anritsu Corporation
8-5, Tamura-cho, Atsugi-shi, Kanagawa, 243-0016
Japan
Phone: +81-46-296-6509
Fax: +81-46-225-8352

• South Korea

Anritsu Corporation, Ltd.
5FL, 235 Pangyojeok-ro
Bundang-gu, Seongnam-si
Gyeonggi-do 13494, South Korea
Phone: +82-31-696-7750
Fax: +82-31-696-7751

• Australia

Anritsu Pty. Ltd.
Unit 20, 21-35 Ricketts Road
Mount Waverley, Victoria 3149, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.
7F, No. 316, Sec. 1, NeiHu Rd, Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817